# IW-R200 Chassis Quick Reference

## Major Components

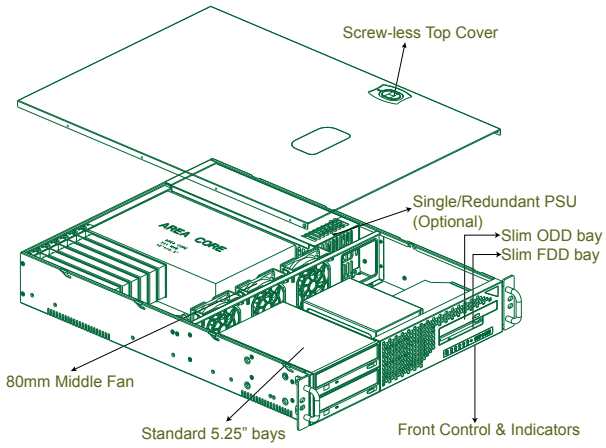


## 5.25" Front Cover Opening

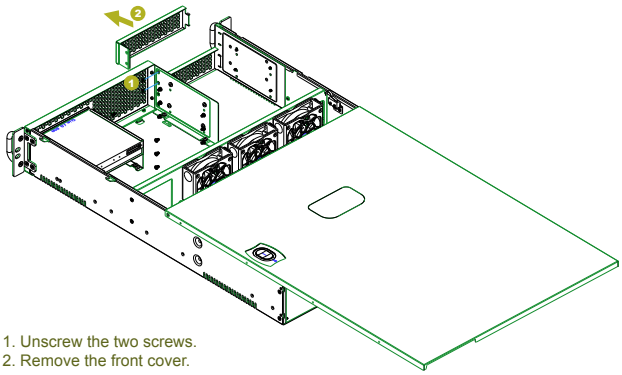

1. Unscrew the two screws.
2. Remove the front cover.

## Front Panel Controls and Indicators

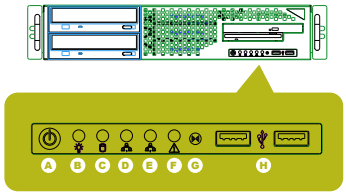

A. Power Button
B. Power LED
C. System HDD Activity LED
D. LAN1 LED
E. LAN2 LED
F. Alarm Notification LED
G. System Reset Button
H. USB 2.0 Port

## Installing 5.25" Device

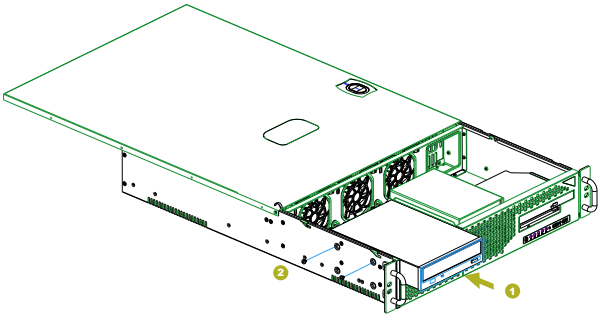

1. Slide in 5.25" device & push down.
2. Attach with screws to fit the device holder metal bracket.

## Rear Window Configuration



Low Profile Slots and/or 3 PCI Slots
Area I/O
Single/Redundant PSU (Optional)

## Easy Hot Swappable Fan Module

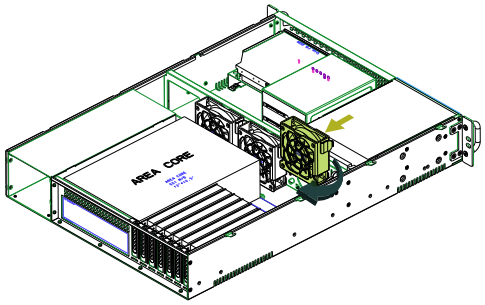

Push out fan module and easy-swap installation.

## Top Cover Opening

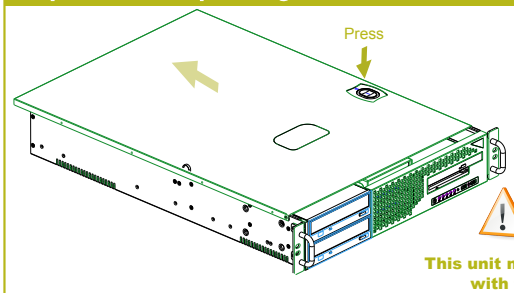


**CAUTION**

**This unit must be operated with the chassis TOP COVER installed to ensure proper cooling**

## 3.5" Device Cage Installation HDD

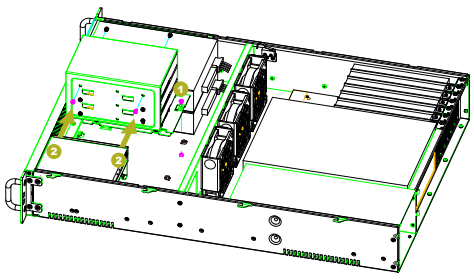

1. Unscrew one screw then release the 3.5" device HDD cage.
2. Attach with screws to secure the HDD in the cage.
3. Attach with the original screw into the chassis.

## Installing Slim ODD & FDD Devices

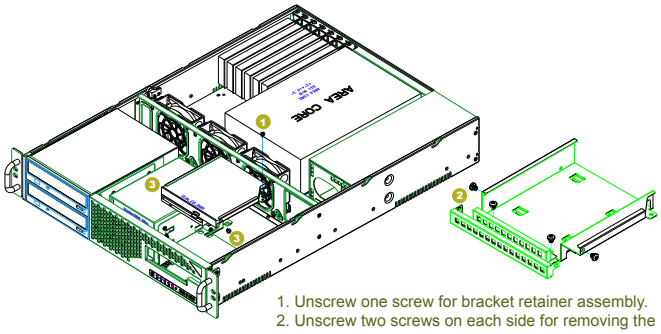

1. Unscrew one screw for bracket retainer assembly.
2. Unscrew two screws on each side for removing the front cover opening bracket.
3. Use four screws to secure the slim ODD/FDD assembly set.